



Quick Start Guide

Windows Mobile CE 5.0, Windows Mobile 5.0, 6.0. 6.1

1. Install the drivers using ActiveSync.
 - a. With ActiveSync running on your PC, connect your PDA or handheld computer to your PC.
 - b. Insert the installation CD into your PC. If the setup does not automatically start, then navigate to the CD and select 'Setup.exe'.
 - c. Select 'Installation', then 'Windows Mobile' on the initial installation screen.
 - d. The Install Shield Wizard will appear. Select 'next'.
 - e. Select 'accept' then 'next' on the license screen to continue.
 - f. You may change the directory where the driver is installed or select 'next' to accept the defaults.
 - g. "Ready to Install Program" appears. Select 'Install' to install.
 - h. Once the installation is complete, the next time ActiveSync syncs with your device, the drivers will be installed.

2. Install the driver manually (advanced user)
 - a. Locate the CAB file on the CD (C:\install\WM\SocketSerial_v1.0.0.2.CAB)
 - b. Move the CAB file to your PDA/handheld computer.
 - c. Click on the CAB file that you put on your PDA/handheld computer.
 - d. The driver will now be installed on your device.

3. Connect the Hardware
 - a. Connect the USB Gigabit Ethernet Adapter to your PDA/Handheld computer using the included USB cable.
 - b. Connect the USB Gigabit Ethernet Adapter to an active LAN/WAN device (router, switch, hub) using an Ethernet cable.
 - c. Power on all devices. The USB Gigabit Ethernet Adapter will auto-negotiate the best speed. The LED light will be green when a successful link is established. The TX/RX will blink when data is being transferred and will turn the following colors to indicate connection speeds.
 - 10 mbps – Orange+Green
 - 100 mbps – Orange
 - 1000 mbps – Green



Windows XP 32 bit

1. Install the driver
 - a. Insert the installation CD into your PC. If the setup does not automatically start, then navigate to the CD and select 'Setup.exe'.
 - b. Select 'Installation', then select the appropriate OS and bit version.
 - c. The Install Shield Wizard will appear. Select 'next'.
 - d. Select 'accept' then 'next' on the license screen to continue.
 - e. You may change the directory where the driver is installed or select 'next' to accept the defaults.
 - f. "Ready to Install Program" appears. Select 'Install' to install. The program will now be installed.
2. Connect the Hardware
 - a. Connect the USB Gigabit Ethernet Adapter to your computer using the included USB cable.

- b. Connect the USB Gigabit Ethernet Adapter to an active LAN/WAN device (router, switch, hub) using an Ethernet cable.
- c. Power on all devices. The USB Gigabit Ethernet Adapter will auto-negotiate the best speed. The LED light will be green when a successful link is established. The TX/RX will blink when data is being transferred and will turn the following colors to indicate connection speeds.
 - o 10 mbps – Orange+Green
 - o 100 mbps – Orange
 - o 1000 mbps – Green



Technical Support

- a. For best technical support, please register your product at <http://support.socketmobile.com>
- b. For updated drivers, manuals, quick start guides, go to <http://SocketSerial.com>, click on 'Products', then select the USB Gigabit Ethernet Adapter.
- c. For additional support, go to <http://SocketSerial.com/support.htm>.